

# Display Assembly Instructions



Please Note: A box cutter and Phillips screwdriver are needed to assemble the Leaf Display.



1. The Leaf display arrives in 3 separate boxes. You may only receive **Box 1** & **Box 2** if you did not get the pedestal stand (**Box 3**).



**BOX 1**

2. Carefully open and remove all the contents of **Box 1** and **Box 2**. (See below for box contents.)



**BOX 2**



3. There are screws used for the assembly attached to the inside of **Box 1**.



**BOX 1**



**BOX 2**



4. Using 3 screws, attach the back panel to the base as shown.



5. Slide the Leaf picture into the page holder on the clear acrylic case.



6. Slide the product cards you wish to use into the card holders.



7. Unpack the contents of the TV box.



8. Remove the protective screen cover.



9. Slide the TV into the back panel.



10. Plug power adapter into TV and power source.



11. Assemble as shown.  
(Acrylic holders can be organized as desired).



12. Please Note: TV must be removed from the display for the remote to operate.

### OPTIONAL



13. Carefully place assembled display on top of pedestal.

